



Bold Enough to be Different for the 21st Century

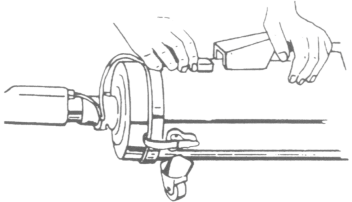
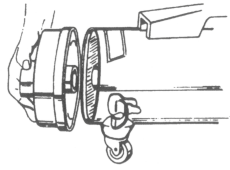
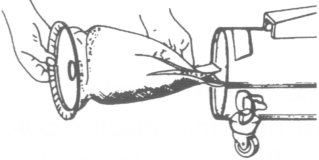
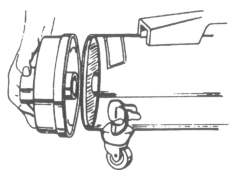


The BK2000 How to Guide

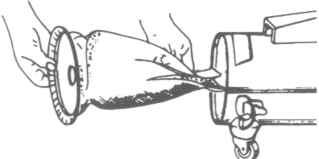

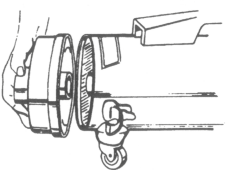
Note: The following pages have been taken from The BK's Owner's Manual.

<i>Table of Contents</i>	<i>Page</i>
<i>1. Disposable Bag Removal/Replacement</i>	<i>2</i>
<i>2. Filter Removal/replacement</i>	<i>2</i>
<i>3. Assembling and Using the Power Head</i>	<i>3</i>
<i>4. Assembling and Using other Attachments</i>	<i>3</i>
<i>5. Troubleshooting your BK2000</i>	<i>4</i>

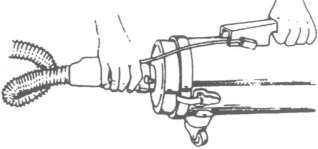
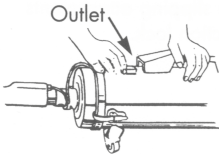
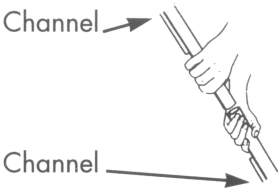
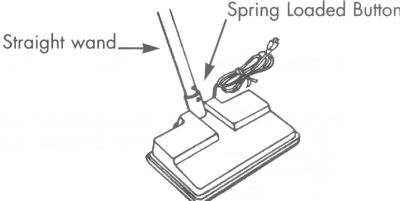
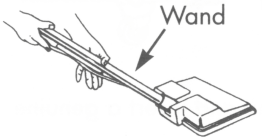
1. Disposable Bag Removal/Replacement

 <p>1. Use genuine AlleRx bags only; failure to do so will void warranty immediately. Unplug the power head.</p>	 <p>2. Remove the front-end bell by first releasing the front-end clamps.</p>
 <p>3. Remove the bag from the unit and replace it with a new AlleRx bag.</p>	 <p>4. Replace the front-end bell and fasten the front-end clamps. TOP label on the front-end bell should face up.</p>

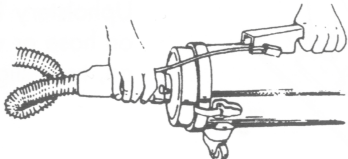
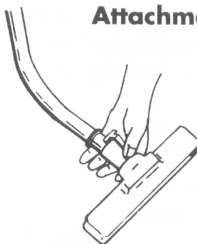
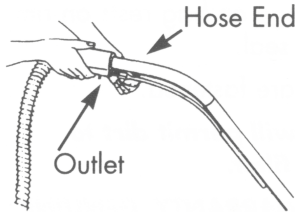
2. Filter Removal/Replacement

 <p>1. Use genuine 3-way filter assembly only; failure to do so will void warranty. Remove the front-end bell and bag by following the instructions above.</p>	 <p>2. Remove and discard the used filter. Place 3-way filter assembly with charcoal/carbon filter facing motor.</p>
	<p>3. Replace the bag, then the front-end bell and finally fasten the front-end clamps.</p>

3. Assembling and Using the Power Head

 <p>1. Grasp hose connector, position over pins on front-end bell and rotate clockwise until locked. Make sure electric cord is on the TOP.</p>	 <p>2. Insert male plug into handle electric plug (located on top of the handle) Push in until it makes contact.</p>
 <p>3. Attach straight wands.</p>	 <p>4. Insert the straight wand into the power nozzle by aligning the spring-loaded button with the hole in power nozzle tube.</p>
 <p>5. Insert power cord into channel on wand.</p>	

4. Assembling and Using other Attachments

 <p>1. Follow instructions to assemble the electric hose already given here.</p>	<p>Attachments</p>  <p>2. Slip the tool on the lower wand by passing the groove and depressing the locking lever on it.</p>
 <p>3. Some attachments such as the dusting brush, the upholstery tool, and the crevice tool can be plugged directly to the hose. Remove the wand first, then add the tool to the end of the hose. When slipping attachment, twist slightly for a friction lock.</p>	

5. Troubleshooting your BK2000

Problem	Possible Reason(s)	Possible solution(s)
Caution : to reduce the risk of personal injury, UNPLUG the unit before servicing it.		
Cleaner won't run	<ol style="list-style-type: none"> 1. Power cord not plugged into outlet 2. Blown fuse or broken switch 	<ol style="list-style-type: none"> 1. Plug unit in firmly 2. Replace part
Cleaner shuts off suddenly	<ol style="list-style-type: none"> 1. Heat sensor detected excessive heat and turned off the unit automatically 	<ol style="list-style-type: none"> 1. Unplug, wait 30 min, press switch twice and resume cleaning
Cleaner won't pick up	<ol style="list-style-type: none"> 1. AlleRx bag is full or missing 2. Broken or worn belt 3. Clogged 3-Way filter assembly 4. Power nozzle to hose passage is clogged 	<ol style="list-style-type: none"> 1. Replace bag 2. Replace belt 3. Replace filter 4. Remove nozzle, remove obstruction from nozzle or from hose
Tools won't pick up	<ol style="list-style-type: none"> 1. Hose clogged 2. AlleRx bag or 3-way filter assembly clogged 3. Handle cord not properly connected 	<ol style="list-style-type: none"> 1. Remove tool, remove obstruction 2. Replace bag or filter 3. Make sure cord makes full contact w/unit
Dust escaping from cleaner	<ol style="list-style-type: none"> 1. AlleRx bag is not installed properly, punctured, or missing 	<ol style="list-style-type: none"> 1. Replace bag and filter assembly
Brushroll is not rotating	<ol style="list-style-type: none"> 1. Belt missing or not assembled properly 2. Brushroll clogged or bound with hair or string 3. Worn Brushroll Bearings 	<ol style="list-style-type: none"> 1. Replace belt 2. Remove clog, cut & remove hair and string 3. Replace brushroll bearings
Belt burns/breaks	<ol style="list-style-type: none"> 1. Clogged or partially clogged brushroll 	Refer to "Brushroll is not rotating" above
Any other servicing should be done by an authorized service agent		